



19" Rack Mount for Asano S4 & M4 Installation Manual

The **rack mounting kit 719-05** is used to install **Asano S4 (790-04)/M4 (703-04)** into an industry standard 19-inch equipment rack. This manual contains the instructions to install the mount.

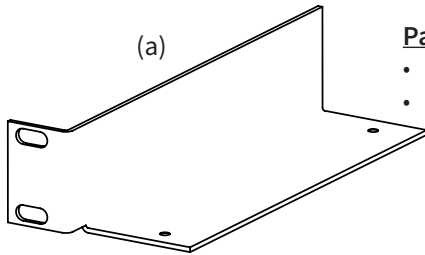

Parts list:

- 2 front rack mounting brackets: left (a) and right (b)
- 4 Phillips M3 x 10 screws (c)

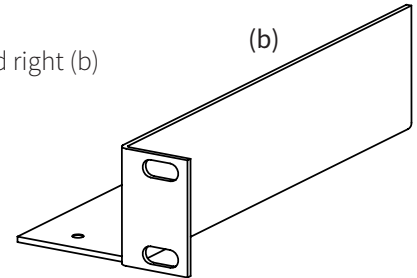

IMPORTANT

The height of the complete set is 4,6 cm. When installing Asano M4, always leave sufficient free air flow around the enclosure. Never cover the cooling fan (e) located at the bottom of the Asano M4. Always ensure at least 1 cm free space under M4.

How to install:

1. Determine one unit rack space for Asano S4/M4. Prepare the rack by installing 2 cage or clip nuts (not included) at the front of the rack.
2. Place Asano S4/M4 upside down on a flat, stable surface with the front facing towards you.
3. Unscrew and remove the four feet (d) from the bottom of Asano S4/M4.
4. Secure both the left and right rack mount brackets (a and b) to Asano S4/M4, using the four Phillips screws (c).
5. Mount Asano S4/M4 into the 19" rack to the corresponding cage nuts using the rack screws (not included).

